
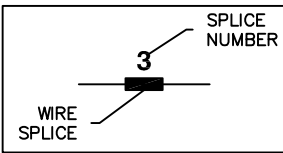
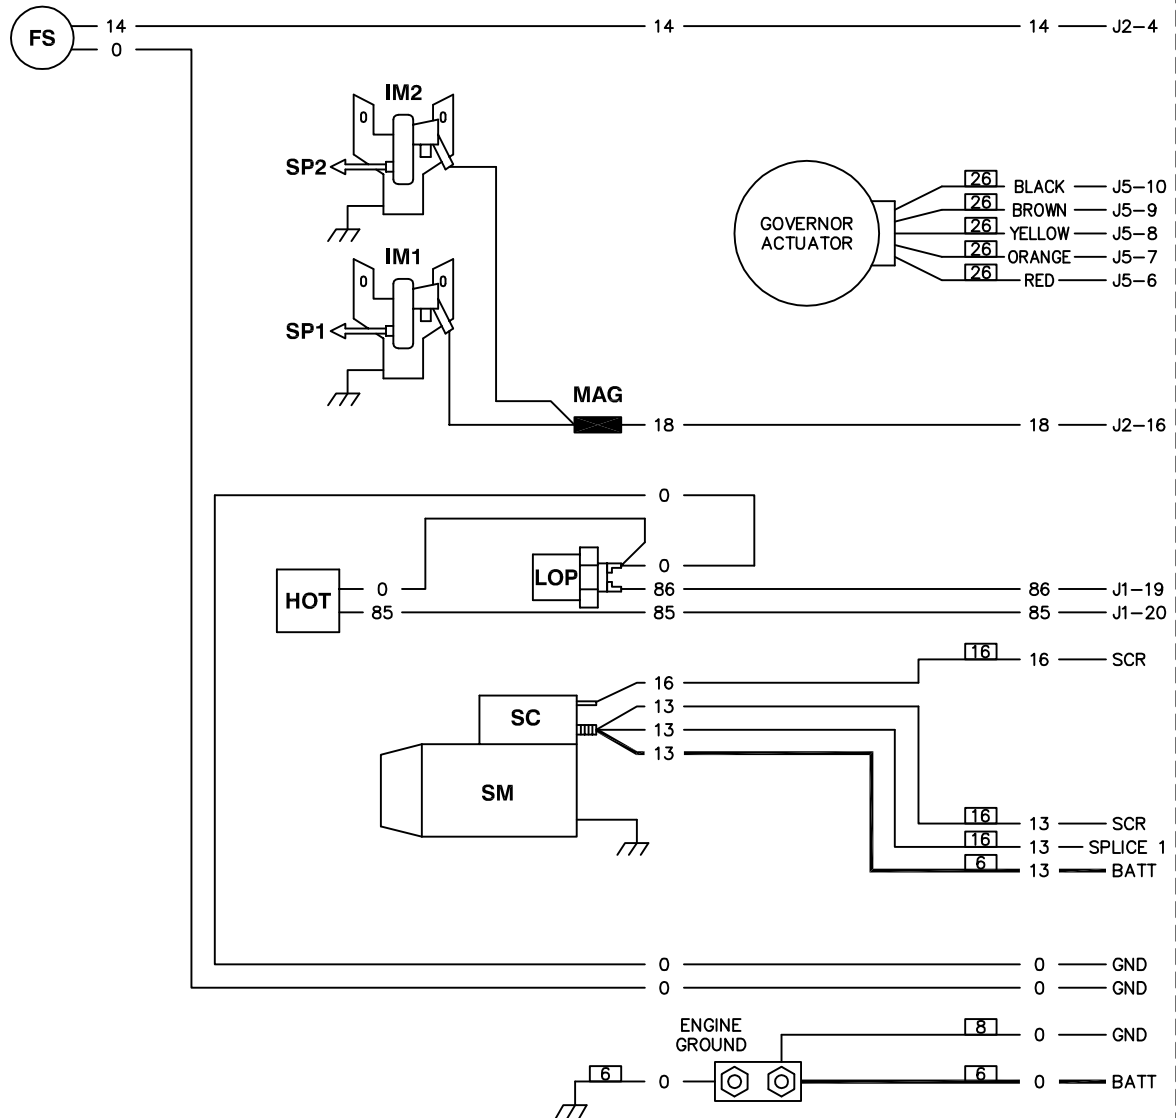


COMPONENTS LOCATED ON ENGINE

LEGEND:

BA	- BRUSH ASSEMBLY
BATT	- BATTERY
BCH	- BATTERY CHARGER
CB1	- CIRCUIT BREAKER, MAIN OUTPUT
CB2	- CIRCUIT BREAKER, DPE (AUTO RESET)
CSS	- CONDITIONED STATOR SIGNALS
ESJ	- EMERGENCY STOP JUMPER
FS	- FUEL SOLENOID
GND	- GROUND
HOT	- HIGH OIL TEMP SWITCH
IM_	- IGNITION MODULE
J_	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
MAG	- MAGNETO
NEU	- NEUTRAL
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP_	- SPARK PLUG
STR	- STATOR
TB_	- TERMINAL BLOCK

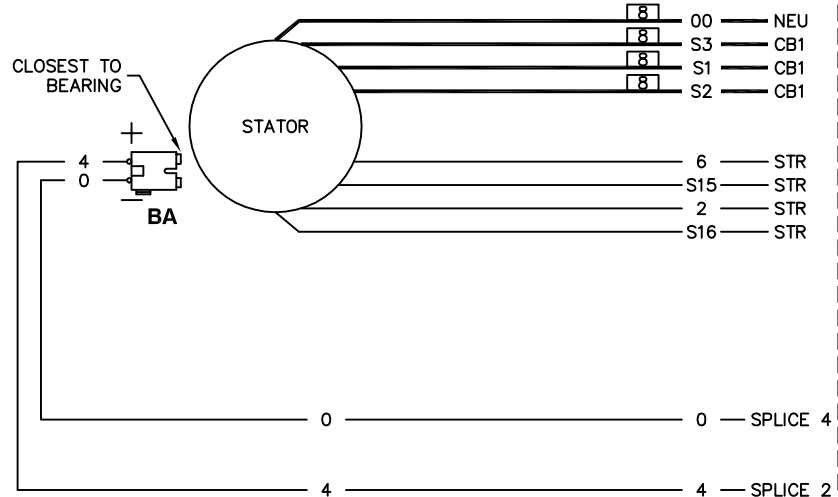


NOTE: ALL WIRES 18 AWG
300V UL LISTED UNLESS
SHOWN OTHERWISE.






AWG SIZE

12


COMPONENTS LOCATED IN CONTROL PANEL

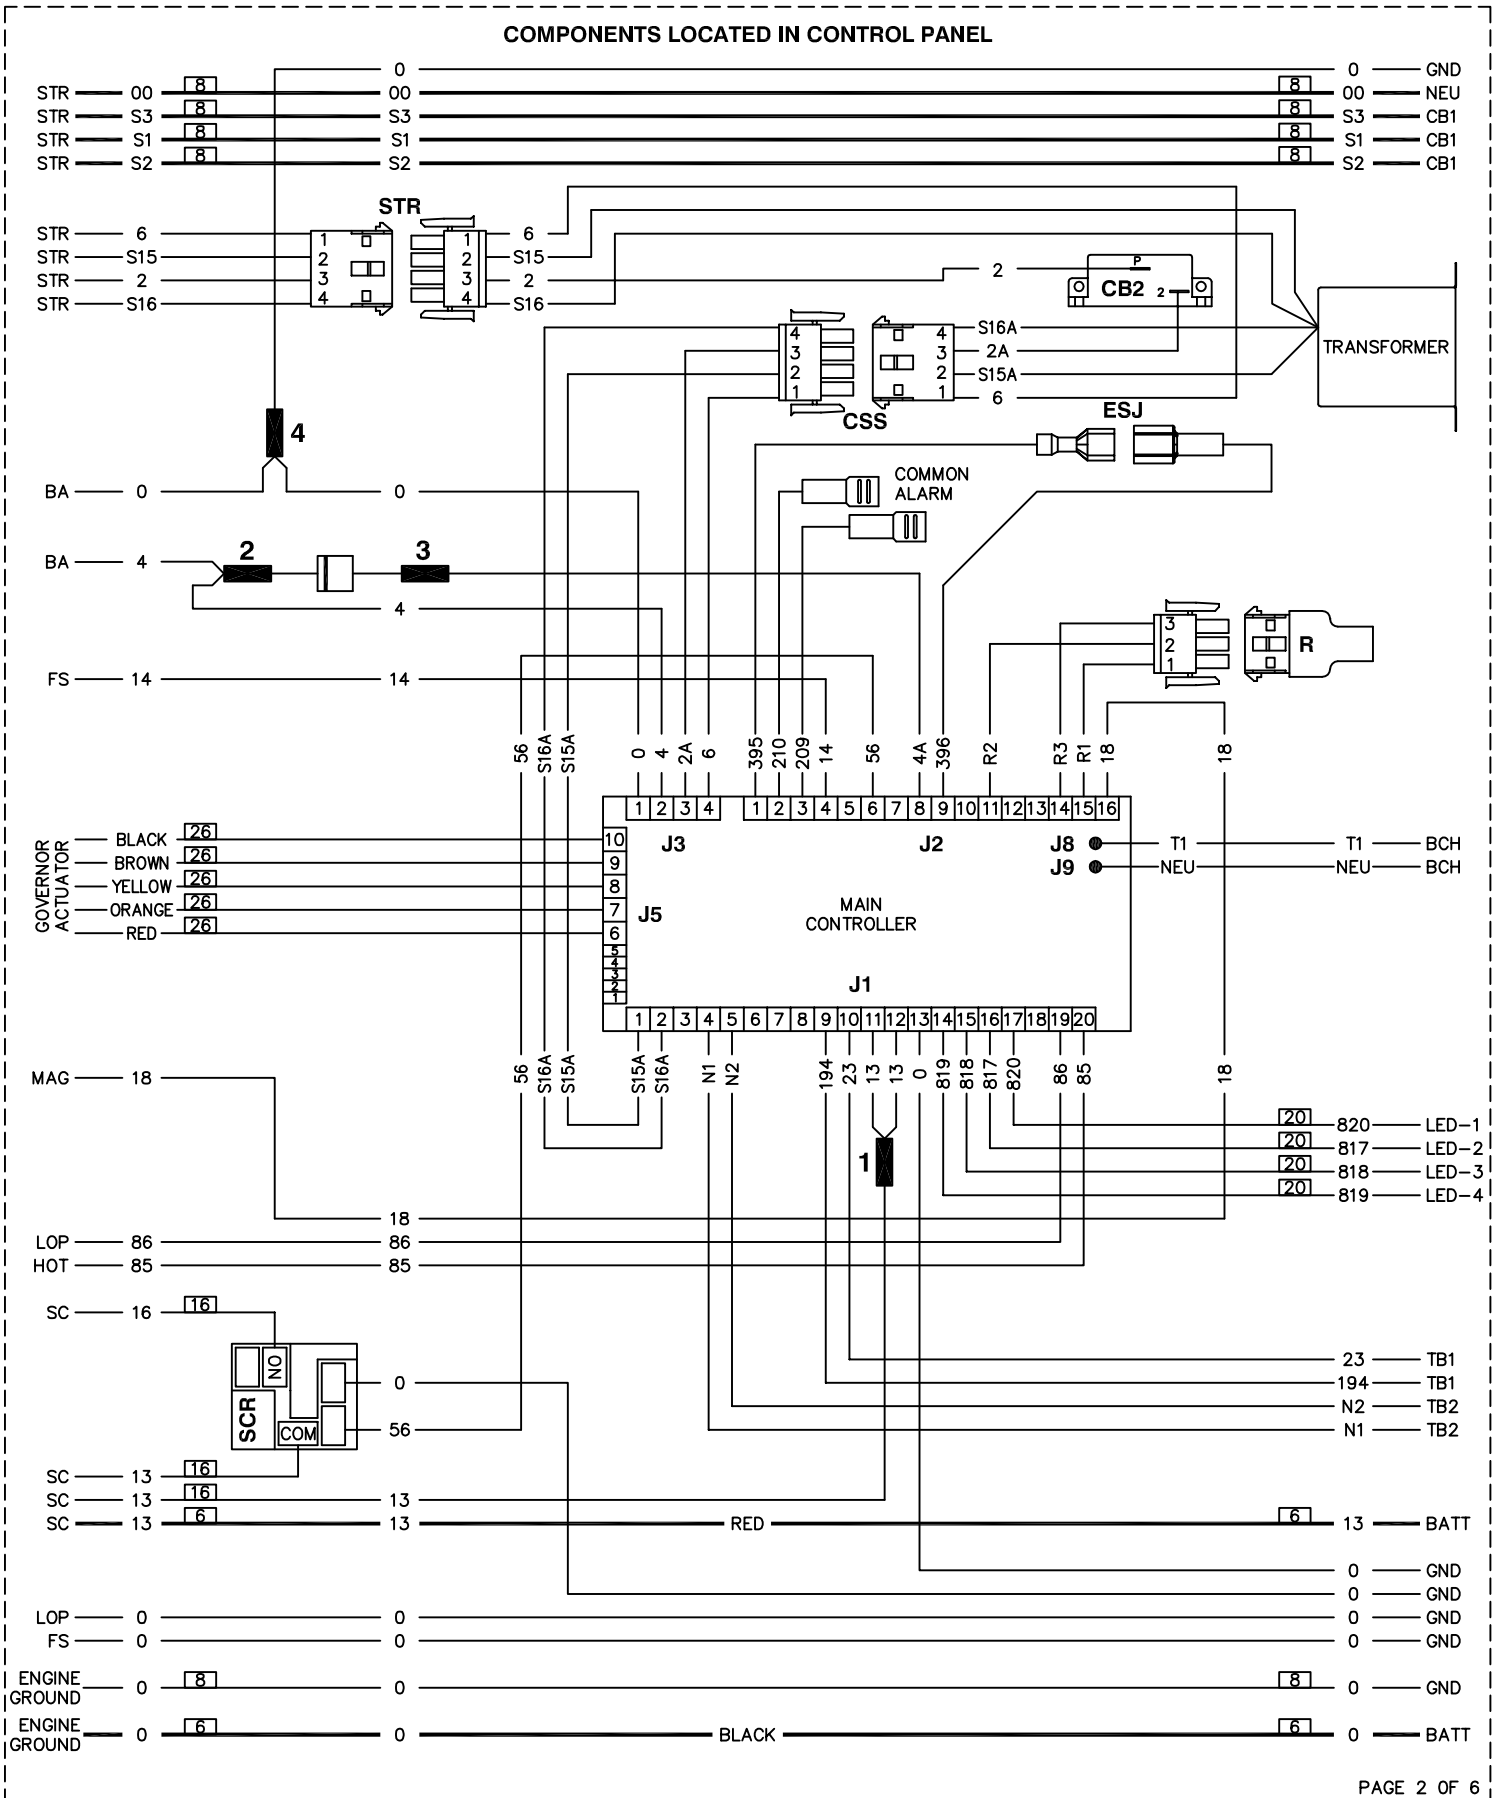


COMPONENTS LOCATED IN CONTROL PANEL

   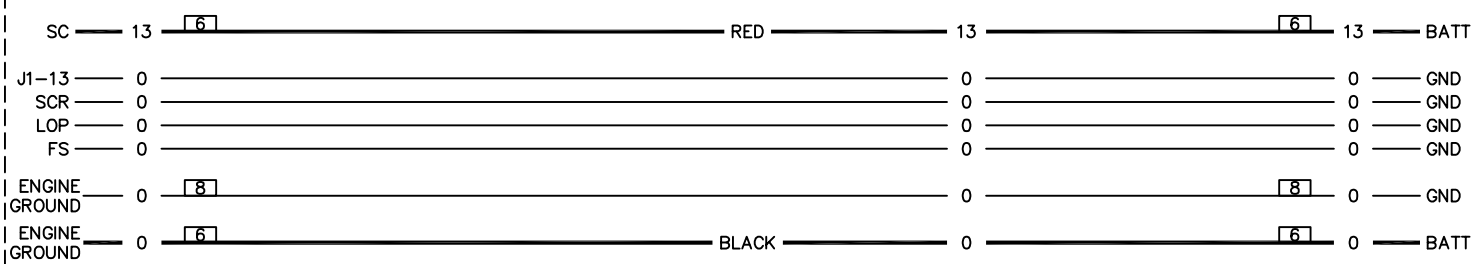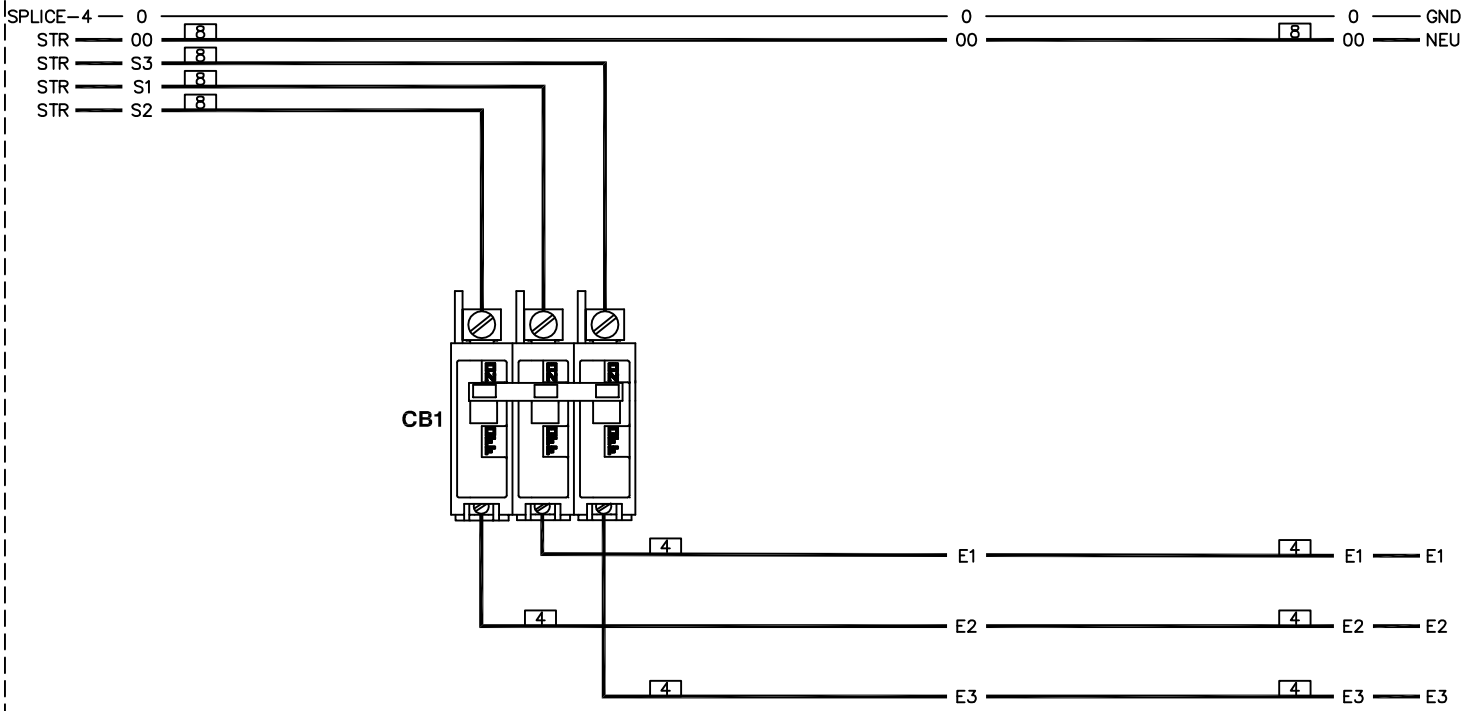

COMPONENTS LOCATED IN CUSTOMER CONNECTION AREA

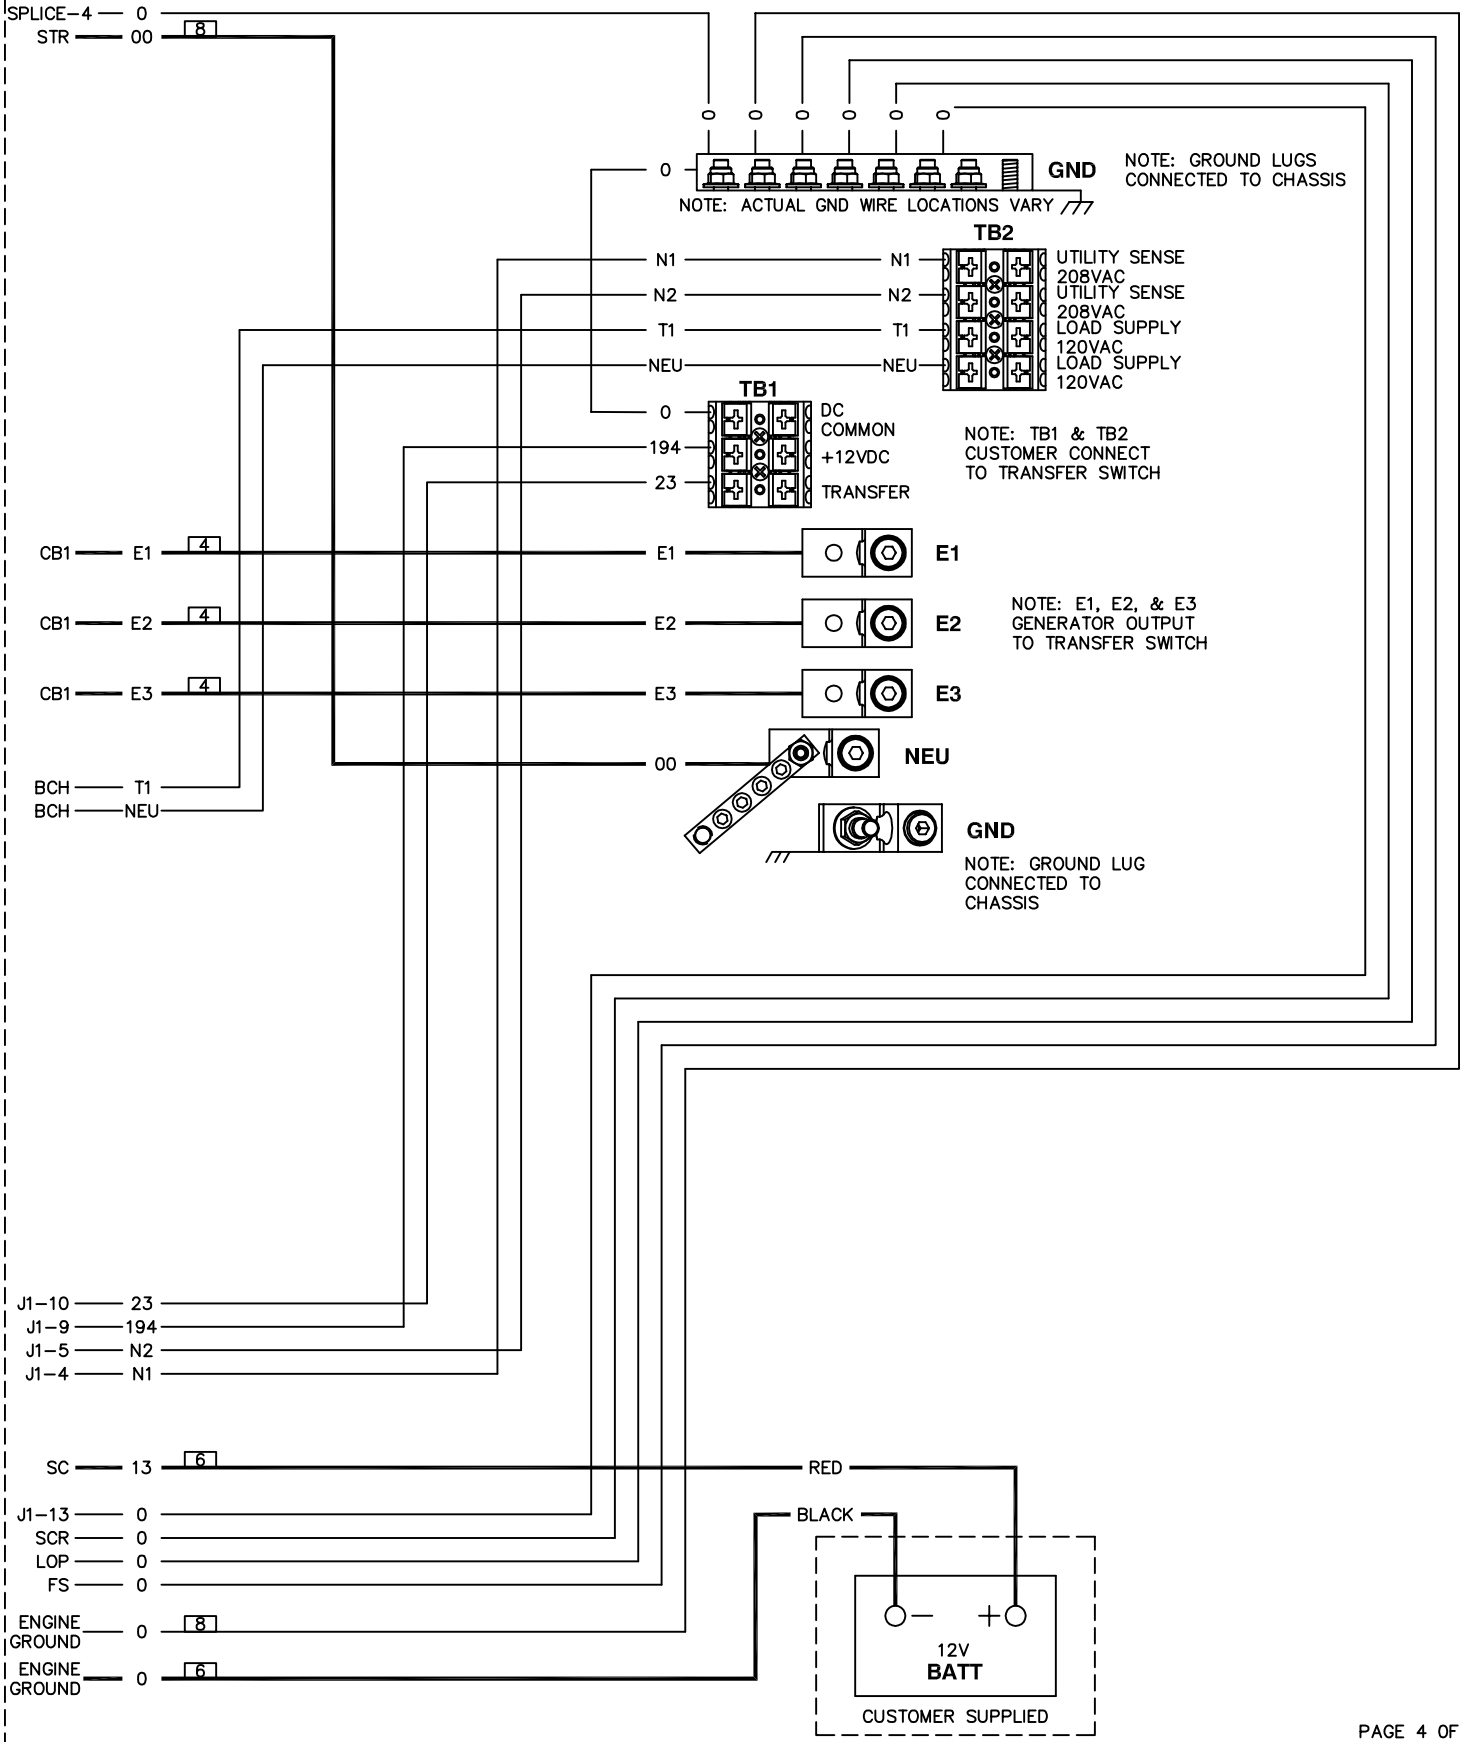

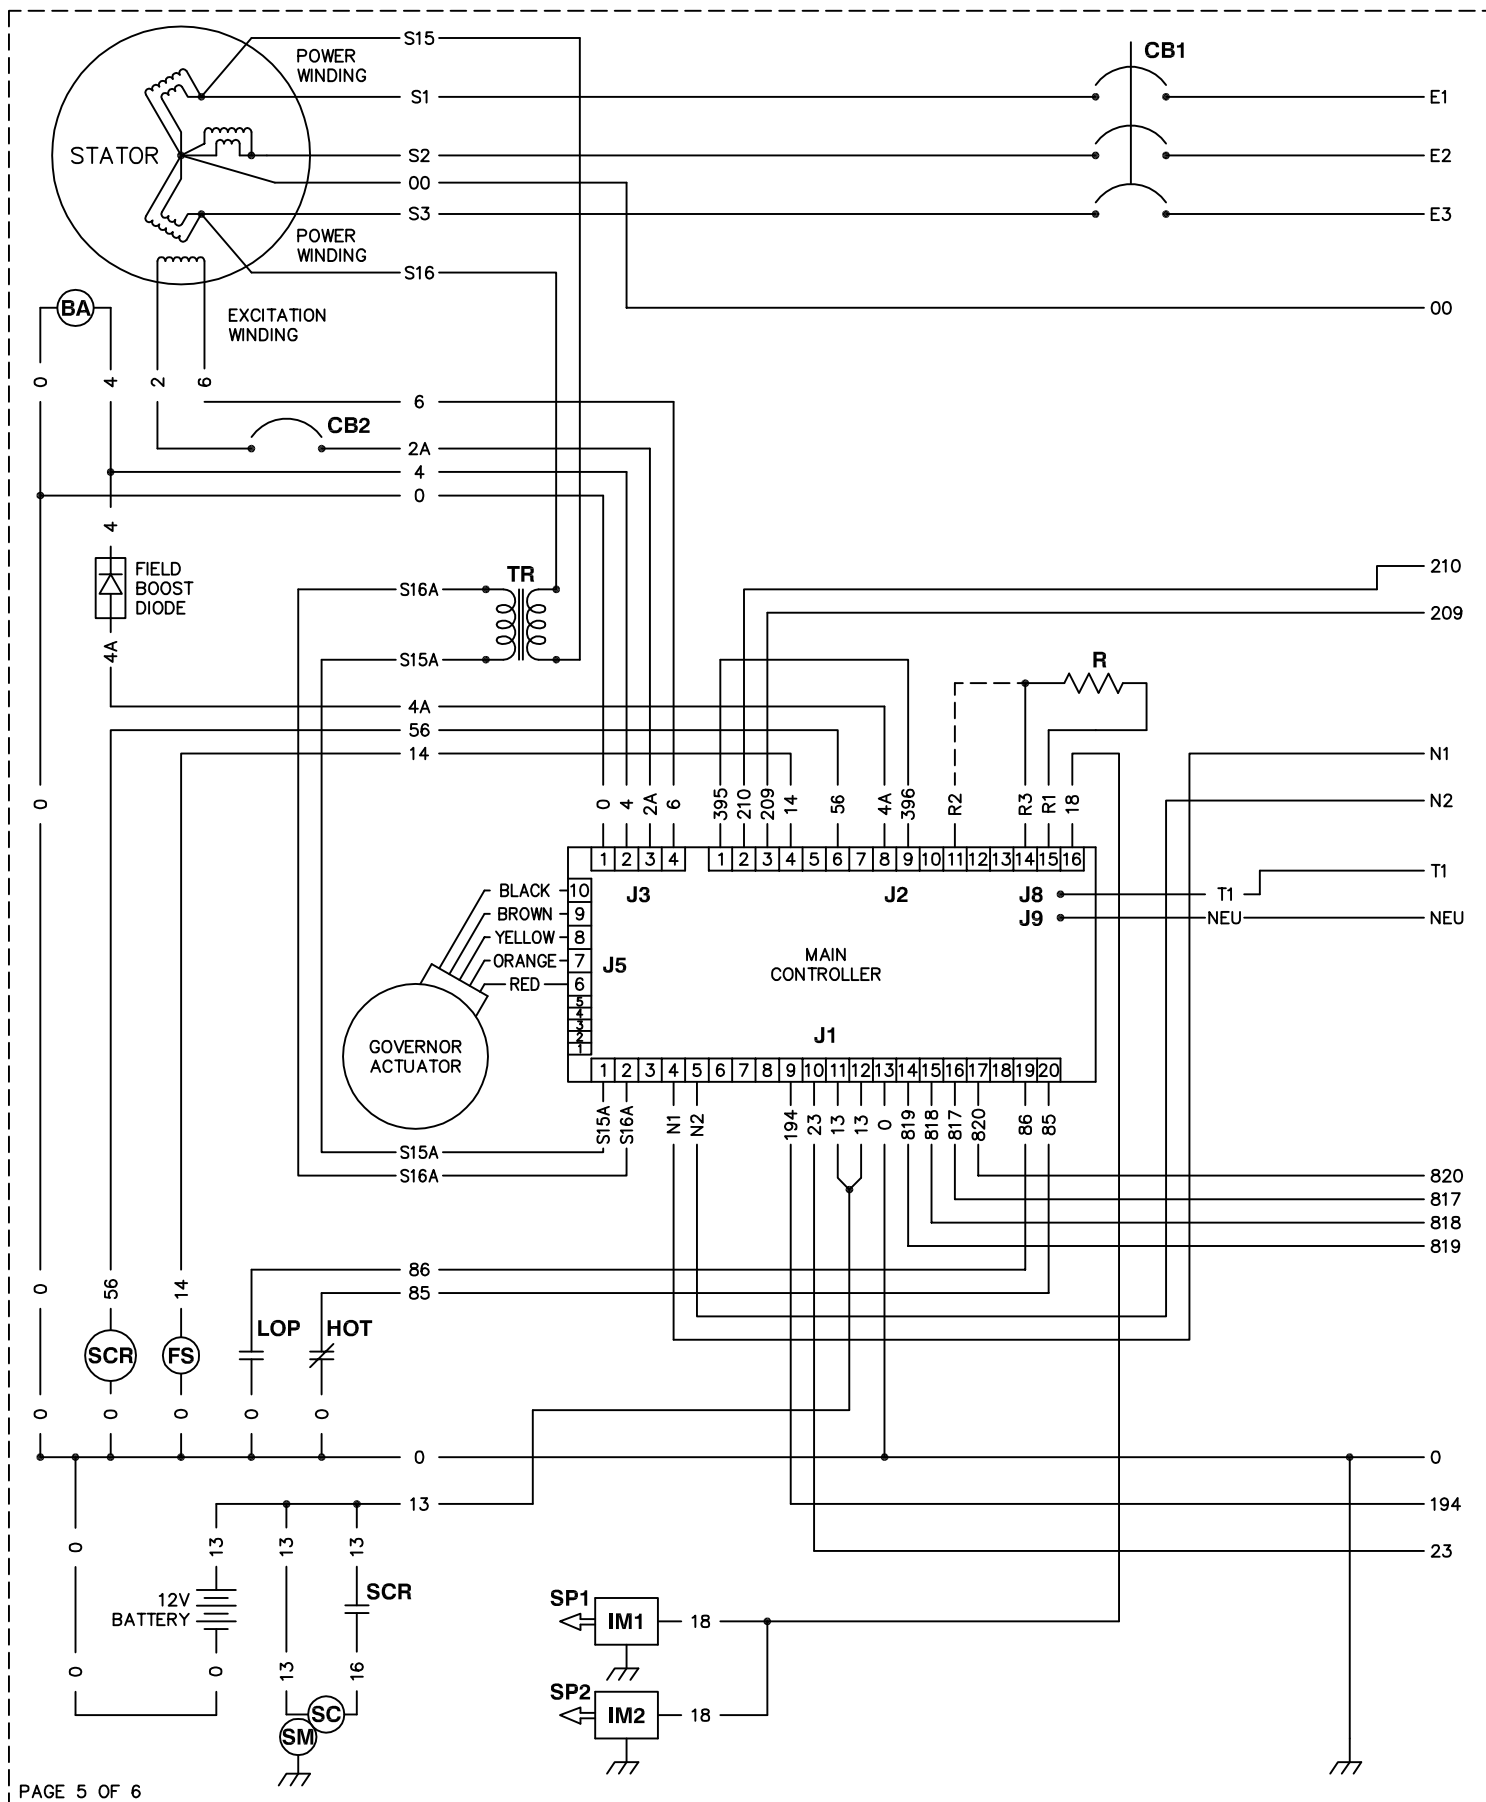

LEGEND:	
BA	- BRUSH ASSEMBLY
CB1	- CIRCUIT BREAKER, MAIN OUTPUT
CB2	- CIRCUIT BREAKER, DPE (AUTO RESET)
FS	- FUEL SOLENOID
HOT	- HIGH OIL TEMP SWITCH
IM_	- IGNITION MODULE
J_	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP_	- SPARK PLUG
TR	- TRANSFORMER

