
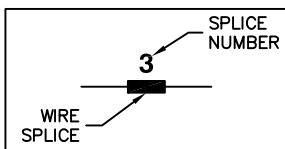
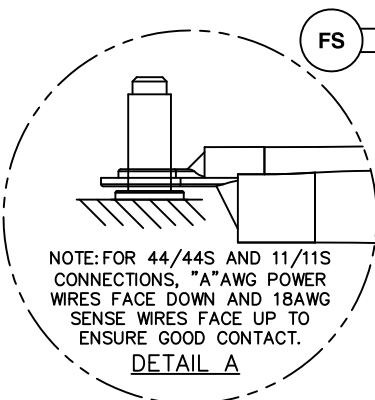


LEGEND:

AS_	- AUXILIARY SHUTDOWN SWITCH
BA	- BRUSH ASSEMBLY
BATT	- BATTERY
BCH	- BATTERY CHARGER
CB	- CIRCUIT BREAKER, MAIN OUTPUT
CT_	- CURRENT TRANSFORMER
FS	- FUEL SOLENOID
GND	- GROUND
HOT	- HIGH OIL TEMP SWITCH
IM_	- IGNITION MODULE
J_	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
MAG	- MAGNETO
NEU	- NEUTRAL
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP_	- SPARK PLUG
STR	- STATOR
STB	- STATOR TERMINAL BLOCK
TB_	- TERMINAL BLOCK
WM	- WIRELESS MODULE


COMPONENTS LOCATED ON ENGINE

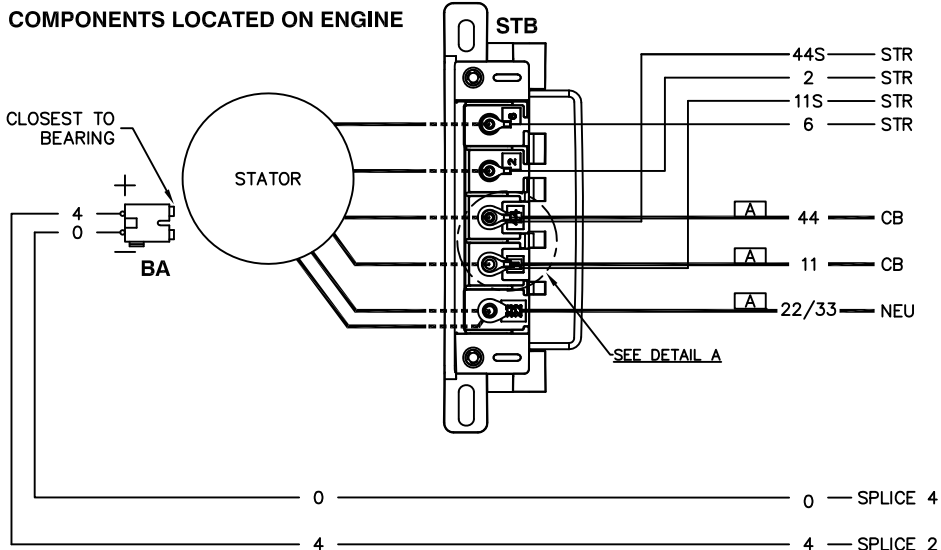



NOTE: ALL WIRES 18 AWG 300V UL LISTED UNLESS SHOWN OTHERWISE.

	AWG SIZE	
[12]		
OR		
[XX]	AWG CHART LETTER REF.	
GENERATOR SIZE	AWG "A"	AWG "B"
20-24KW	8	3
26KW	6	2

  
NOTE: DASHED WIRES INDICATE A HIDDEN WIRE UNDERNEATH THE RESPECTIVE COMPONENT










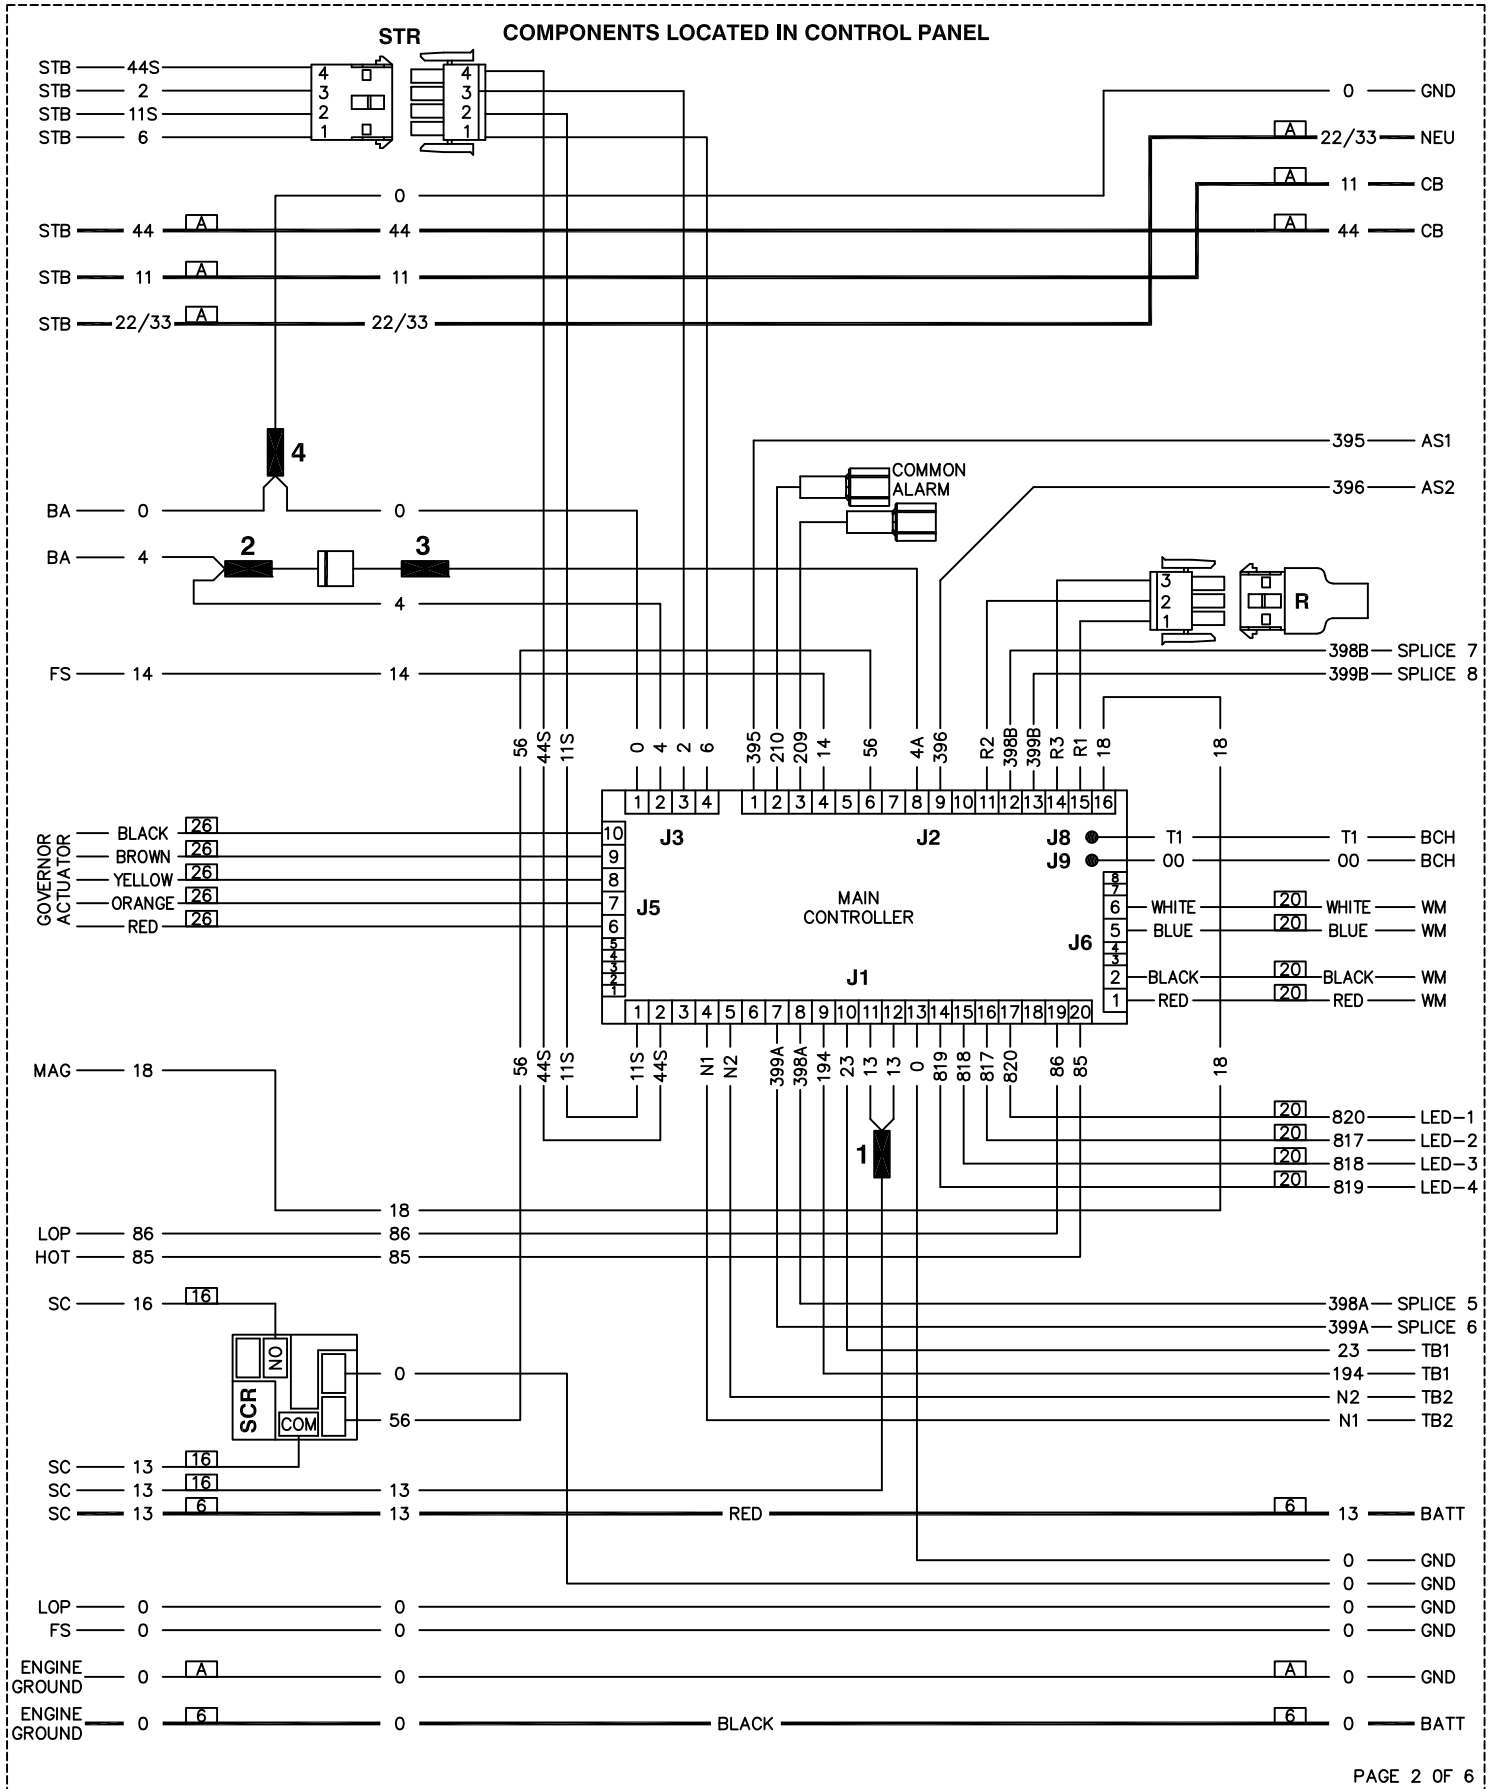




     COMPONENTS LOCATED IN CUSTOMER CONNECTION AREA

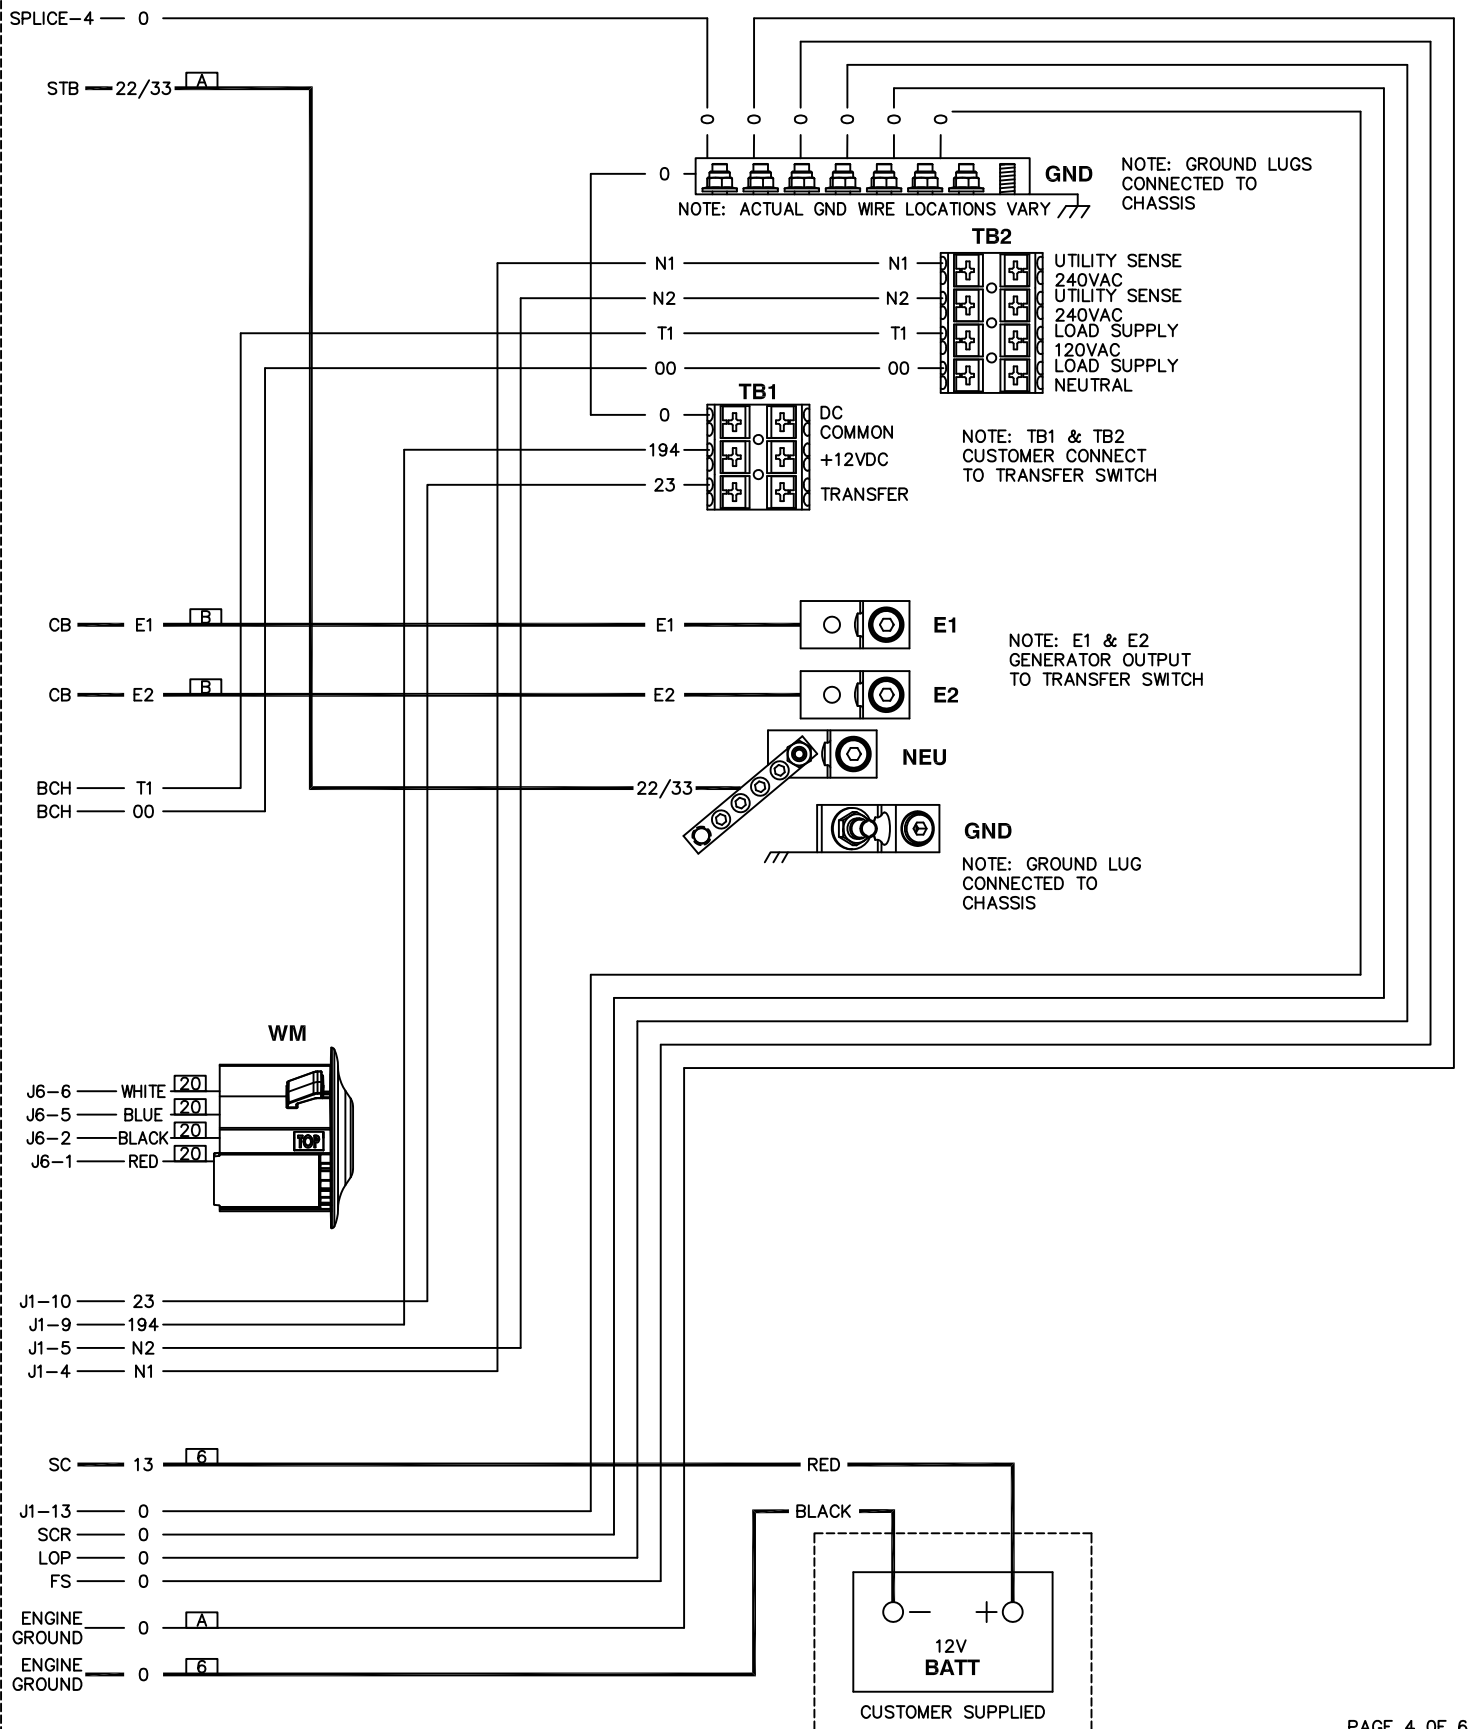

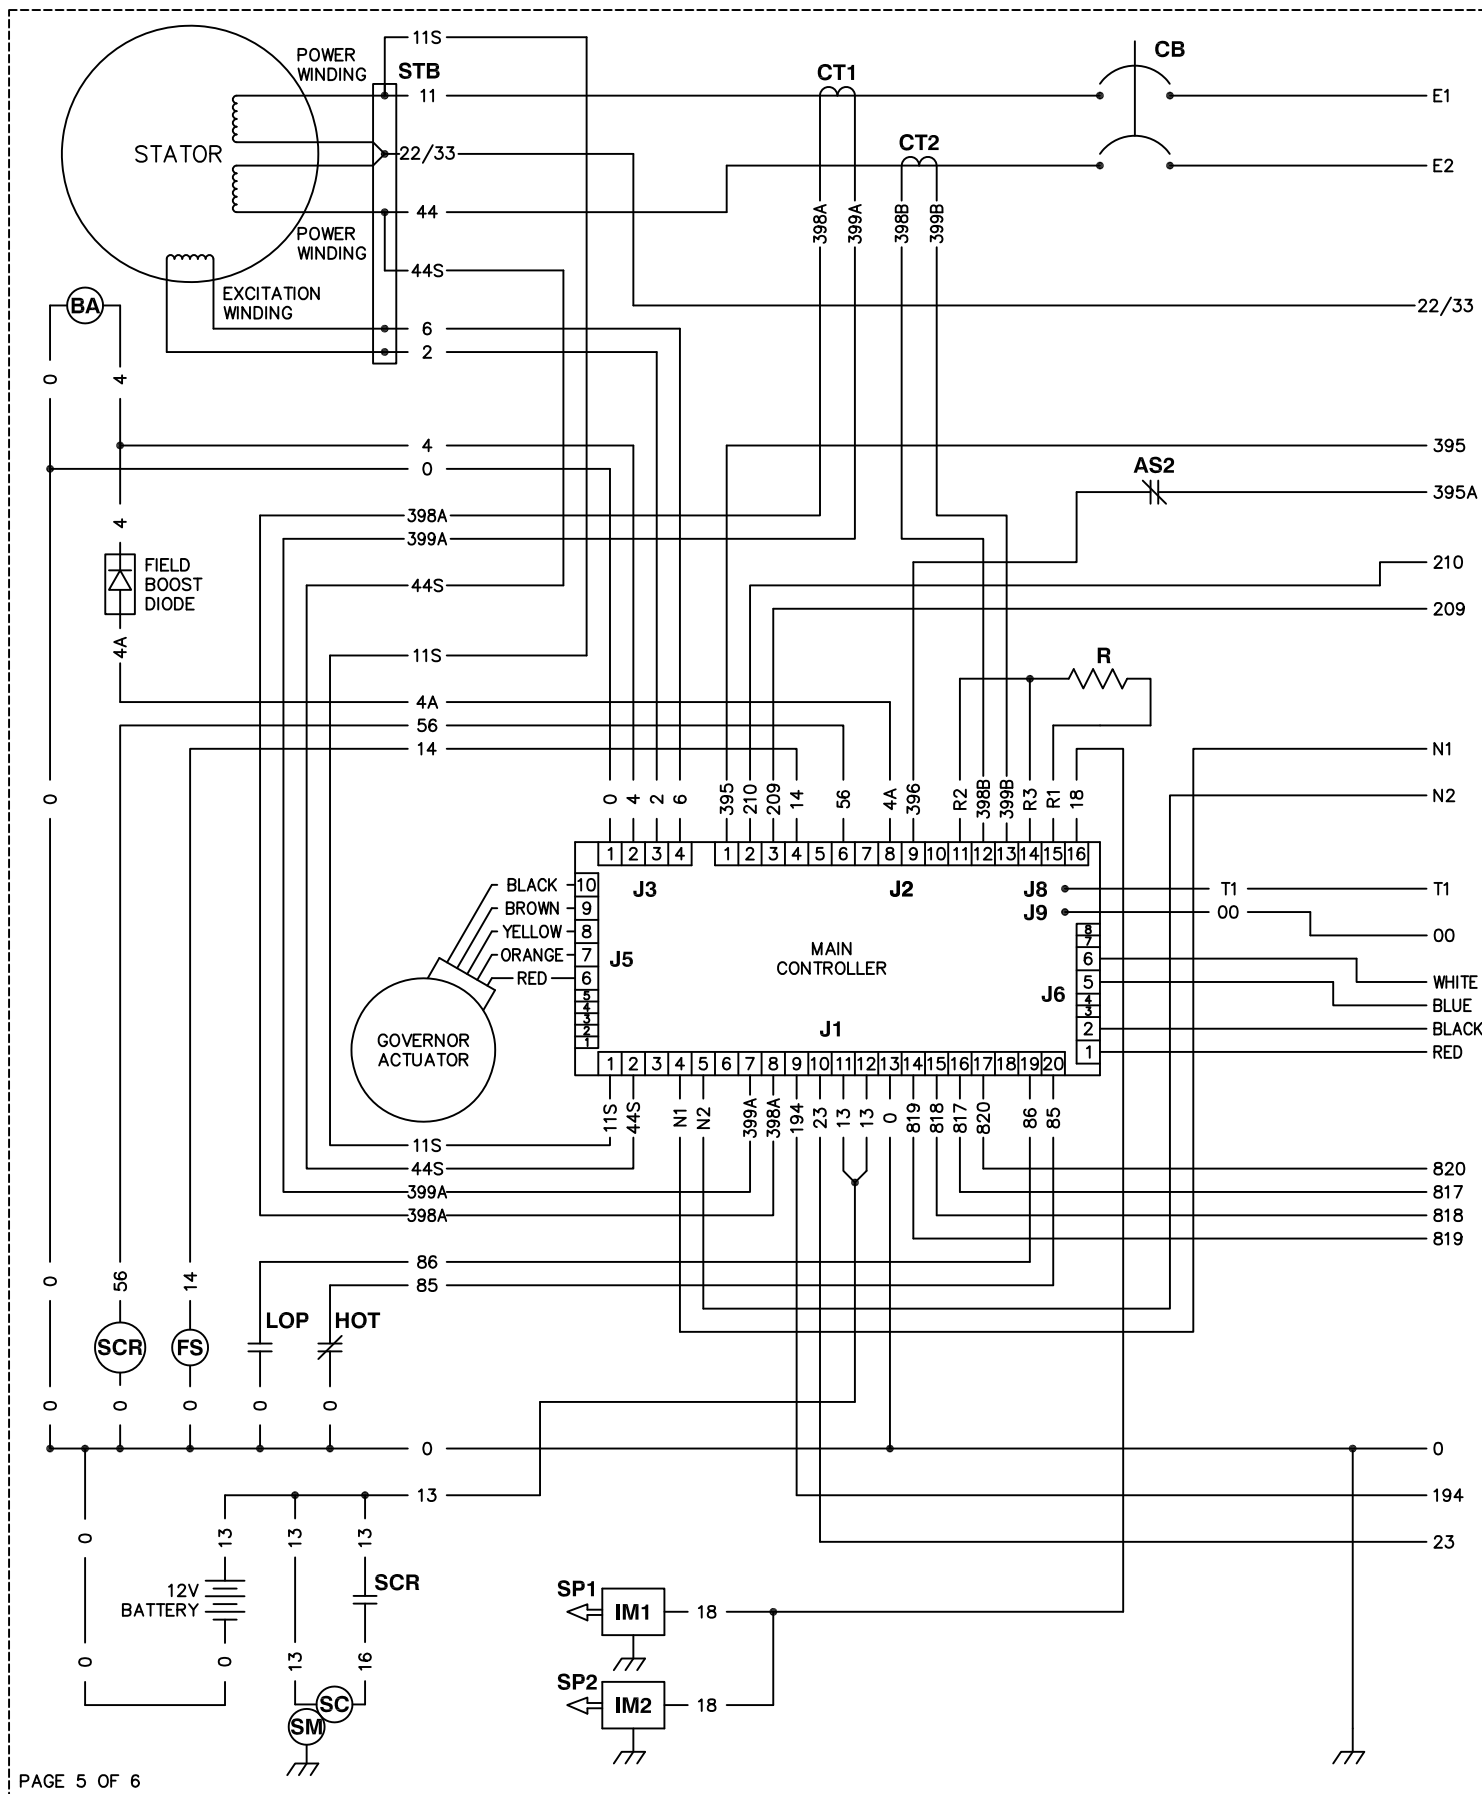

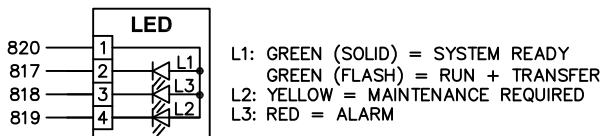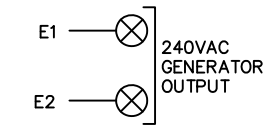

LEGEND:	
AS_	- AUXILIARY SHUTDOWN SWITCH
BA	- BRUSH ASSEMBLY
CB	- CIRCUIT BREAKER, MAIN OUTPUT
CT_	- CURRENT TRANSFORMER
FS	- FUEL SOLENOID
HOT	- HIGH OIL TEMP SWITCH
IM_	- IGNITION MODULE
J_	- MAIN CONTROLLER CONNECTIONS
LED	- LED BOARD
LOP	- LOW OIL PRESSURE SWITCH
R	- RESISTOR
SC	- STARTER CONTACTOR
SCR	- STARTER CONTROL RELAY
SM	- STARTER MOTOR
SP_	- SPARK PLUG
STB	- STATOR TERMINAL BLOCK
WM	- WIRELESS MODULE

